

MS EASY INSTRUCTIONS



Mesrutiyet caddesi. Hatay Sokak. 17/B
06640. Kızılay / Ankara
Turkey
Tel : +90 312 417 72 75
Fax : +90 312 425 72 81
Web : www.oliser.com.tr
Email : oliser@oliser.com.tr



PREPARATION

Place an Ink supply bottle to the back of the machine and insert the ink supply tube into the bottle.

Plug in the plug and the machine will be ready to start filling .

Now, The machine is ready to fill the cartridges. Before filling the cartridges, be sure that they are empty. If not, evacuate the remaining ink from cartridge.

This machine is designed to only fill FRESH CARTRIDGES (you can also fill non-fresh cartridges using a steam generator before filling)

Strictly recommended : Before filling the cartridges we recommend you to clean the printheads of the cartridges by a steam generator. It will help you to fill the cartridges easily and will open the all clogged or dried printheads, So, your success rate will increase

To Order Call: [+90 312 417 72 75](tel:+903124177275)





Check, if the cartridge is undamaged for filling.



Place the cartridge to the evacuation station



Switch On for Evacuation



Be sure that the remaining ink is removed, and flip the handle down to take out the cartridge

To Order Call: [+90 312 417 72 75](tel:+903124177275)





Take the cartridge out for starting filling operation



Place the cartridge to the filling station



Flip the handle up to secure the cartridge



Push the Start/Stop button to start filling. Including pressurizing machine will fill the cartridge in 2,5 minutes, when filling operation has completed place the cartridge into evacuation station and evacuate 2-3 seconds for priming.

To Order Call: +90 312 417 72 75





Place the cartridge to the 15/40/45 Evacuation Station and Flip the handle up to squeeze the cartridge



Switch On for Evacuation



When the evacuation operation is completed, then remove the cartridge from the station, flipping the handle down



Place the cartridge to the 15/40/45 filling station for filling operation. Including pressurizing machine will fill the cartridge in 2,5 minutes, when filling operation has completed place the cartridge into evacuation station and evacuate 2-3 seconds for priming.

To Order Call: +90 312 417 72 75

Tube replacement of motors



To Order Call: [+90 312 417 72 75](tel:+903124177275)